

# **Anti-Carbonation Coating for Concrete**

### **Packaging**



### **Mixing**



**Application** 



Concrete

## **Materials**

Natural Sealer (solvent-based sealer)

## **Surface Preparation**


All surfaces must be clean and sound, and free of grease, dust, coatings and other contaminants. New concrete must have cured for 28 days or more.

# Workmanship

Apply products in accordance with the manufacturer's written instructions and good trade practice.

# **Application**

Apply two coats of **Natural Sealer** at a rate of 10m<sup>2</sup>/litre/coat and allow 2-4 hours between coats.

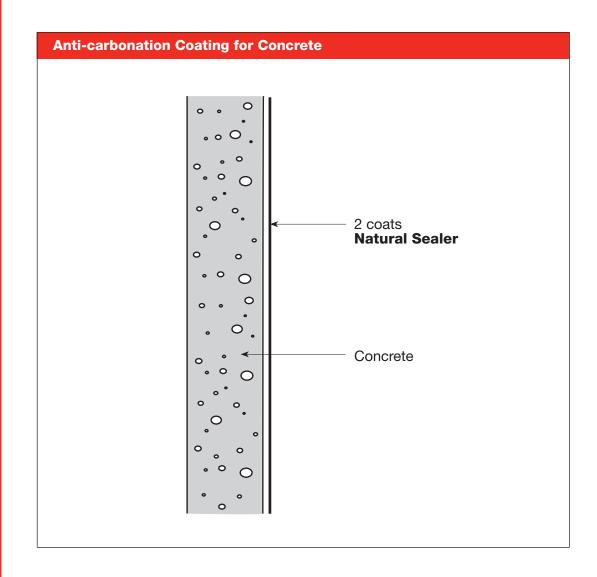



**Adelaide** (08) 8243 7888 **Darwin** (08) 8947 1811 **Perth** (08) 9356 9999 **Auckland** (09) 273 5444

**Brisbane** (07) 3271 2944 **Melbourne** (03) 9761 4711 **Sydney** (02) 9756 3533 **Kuala Lumpur** (603) 5122 2522